


Assembly Instructions

Video Instructions available at
www.instantcomfort.com/assembly

Q4

1. Unpackage all components & verify you have everything required.

Immediately discard all packaging as it can pose a choking hazard.

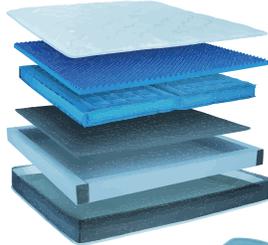


1 Top Cover
1 Comfort Layer
1 or 2 Air Chambers
1 Support Layer
1 Wrapped Rail Set
1 Bottom Cover




1 Air Control System
with 2 Wired Remotes


2. Ensure you have a base, foundation, or adjustable platform ready for your new bed.

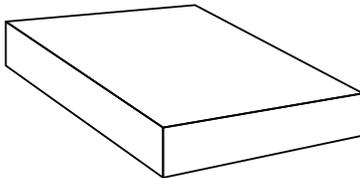


3. Place the bottom cover of the mattress on the foundation, with the zipper side up. Position the two holes at the head of the bed.

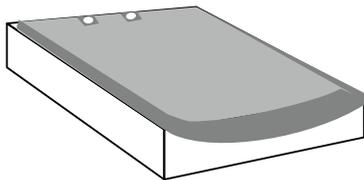


4. Insert the head, foot, & side rails inside the bottom cover. Position the rails so that "This Side Up" is up & visible. The rails will have a snug fit when correctly installed.

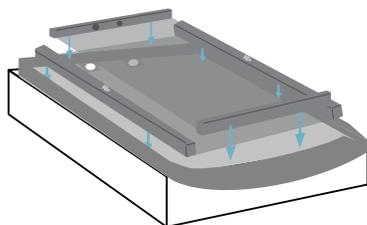


5. Place the foam support layer between the rails and smooth it out to fill the entire base.

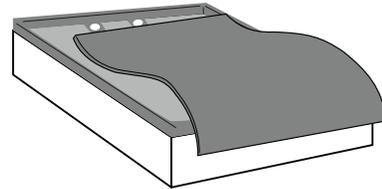

6. If your mattress has two chambers, place one in before the other & be sure to pass the tubes through the holes in the bottom cover.

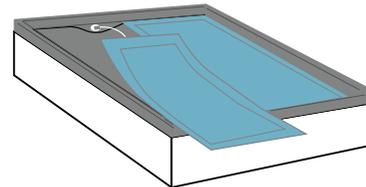

7. Connect the tubes from the air chambers to the connectors on the pump. Press the two ends together until you hear a "Click." Be sure to keep track of which hose connects to which side of the pump.

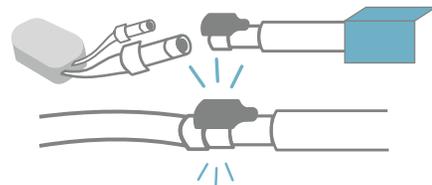


7. Connect the air control unit to a powered surge protector & plug the hand controls into the each side. The hand control will operate the air chamber on the side that it is plugged into.*




*a surge protector is not included but is strongly recommended to prevent electrical damage not covered by the warranty.
See the instantcomfort.com/warranty for more information.


8. When the controller boots, simply press 1 & the chamber will auto-inflate. Wait until the pump is finished filling the air chamber, then press 1 on the second hand control to fill the other chamber where necessary. Note that inflation may take up to 5 minutes per side, & the pump will only fill one side at a time.

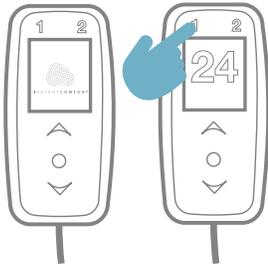


9. Once both air chambers have been filled, make sure that they are positioned evenly inside the foam rails.

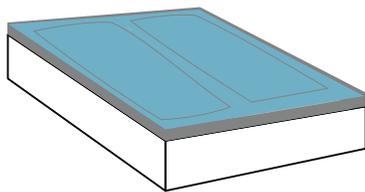

10. Place the comfort layer across the top of the air chambers and foam rails.

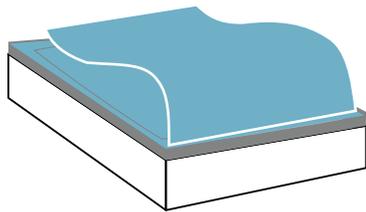


11. Place the top panel across the top of the mattress with the tag facing the head of the bed.

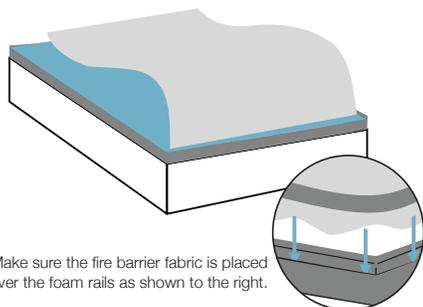


Make sure the fire barrier fabric is placed over the foam rails as shown to the right.

12. Zip the top panel onto the bottom cover, being careful not to snag the covers or any internal materials.

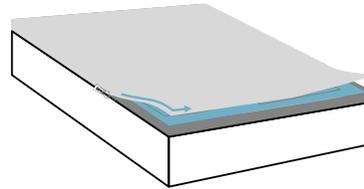

13. Now, find your ideal setting! We recommend starting at the most firm setting, & reducing firmness until it is softer than you would like, & gradually increase in firmness until you find your ideal setting.

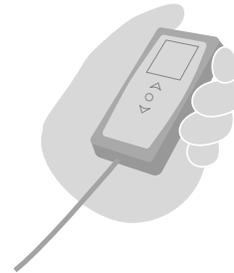

If you have any problems, questions, or comments feel free to visit us at

www.instantcomfort.com

Thanks for your purchase, and we hope you enjoy a great night's sleep!